

## Beer brewing

### Facts & figures:

Beer is the third most popular beverage in the world, coming in directly behind tea and water.


American beer is made mostly from rice. This was invented to give American beer a lighter taste and tap into the market of women buyers.

In the UK 28 million pints of beer are consumed every day, which equates to 100 litres per head each year.

Belgium has over 400 different beer brands.

Cenosilicaphobia is the fear of an empty glass.

Map of the world by beer consumption

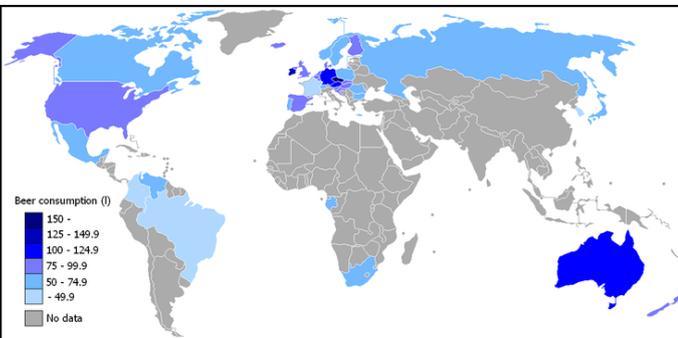

### Beer brewing in general

There is no exact date, as to when the first beer was brewed but already at the beginning of the fifth millennium BC, people in southern Mesopotamia, in a region known as Sumer (modern Iraq), were brewing beer.

Beer, like other commodities such as wheat and other grains, was used as a currency.

A clay tablet, dating from 6'000 BC contains one of the oldest known beer recipes.

The basic ingredients of beer are: water; a starch source: which is able to be fermented; yeast: to produce the fermentation; a flavouring such as hops.

There are several steps in the brewing process, which include **malting, milling, mashing, lautering, boiling, whirlpooling, fermenting, conditioning, and filtering.**

Yeast is the microorganism that is responsible for fermentation. **Saccharomyces cerevisiae** is the species of yeast that is used for brewing.



A pint of beer and a few ingredients...

#### Step by step brewing:

**Malting:** germination of cereal grains. The sprouted cereal is then kiln dried at around 55°C.

**Milling:** grinding of the malted cereal.

**Mashing:** the cereals are mixed with water and then heated.

**Lautering:** separation of the mash: the liquid (wort) is separated from the residual grains.

**Boiling:** the wort is boiled to ensure sterility and then hops are added for flavour!

**Whirlpooling:** the wort is sent into a whirlpool, removing the dense particles using centrifugal force.

**Fermenting:** yeast is added to the wort: conversion of the carbohydrates to alcohols and carbon dioxide - the chemical conversion of sugars into ethanol!

**Conditioning:** the tank is cooled and the yeast and proteins separate from the beer. This conditioning period is also a maturing period.


**Filtering:** the beer is filtered: stabilising the flavour.

**Packaging:** the beer is

#### Discussed in this edition:

- Beer brewing in general 1
- An example brewing process 1
- Why the need to measure carbon dioxide? 2
- How does CO2 affect the human body? 2
- What solutions can Rotronic offer? 3
- Rotronic Products 3
- Customer benefits 3
- Contact us 4

### An example brewing process

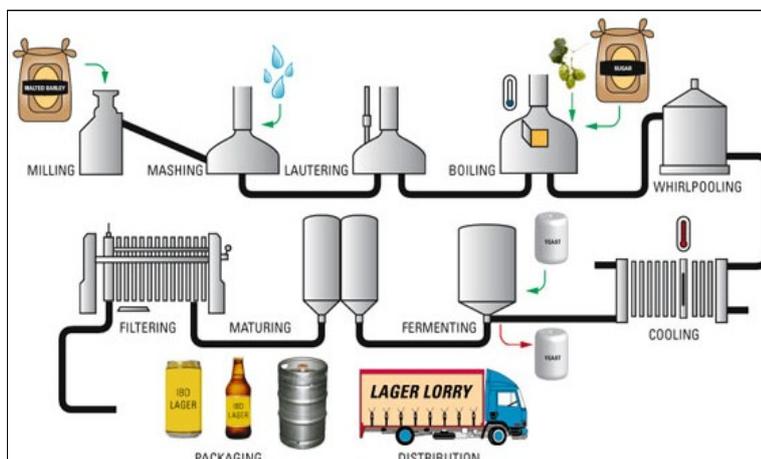

## Why the need to measure the carbon dioxide?



Malting barley

### Carbon dioxide

Carbon dioxide (CO<sub>2</sub>) is a naturally occurring chemical compound. It is a gas at standard temperature and pressure.

We inhale oxygen and exhale carbon dioxide. The carbon dioxide level in exhaled air is rather constant: around 3,8%.

When carbon dioxide is exhaled it will quickly be mixed with the surrounding air even indoors and provided that the ventilation is good, the concentration will be reduced to harmless levels.



Mashing



Fermentation

Indoor carbon dioxide levels usually vary between 400 and 1'200 ppm (parts per million). Outdoor carbon dioxide levels are usually 350 - 450 ppm.

### Beer brewing process:

Heavily industrialised or con-

taminated areas may periodically have a higher concentration of CO<sub>2</sub>.

Carbon dioxide is released during the beer brewing process and as you will see below, CO<sub>2</sub> is toxic for living organisms.

In brewery environments where process generated carbon dioxide is widely present, the maximum permitted carbon dioxide concentration according to most standards is as high as 5'000 ppm (5%) during an 8 hour working period.

### Beer storage:

Most beer leaves the brewery **carbonated**: beer and carbon dioxide are sealed in a container under pressure.

It can be **carbonated during fermentation** but it can also be **carbonated in the bottle**.

In this case the beer is allowed to ferment completely. It is left unfiltered which leaves active yeast suspended in it. A small amount of sugar is then added at bottling time. The yeast begins to act on the sugar: CO<sub>2</sub> is released and absorbed by the beer.

Beer can also be **force carbonated**, in which case it is allowed to fully ferment. Then CO<sub>2</sub> is pumped into a sealed container with the beer and absorbed by the liquid. In this case, a tank of carbon dioxide will also be required.

Undetected leaks in a gas system is a costly waste and a safety risk to personnel. While small leaks are inherent in any gas system, those of significant size raise the level of economic and safety risk.

## How does CO<sub>2</sub> affect the human body?

Due to the health risks associated with carbon dioxide exposure, there are regulations and laws in place to avoid exposure! The US National Institute for Occupational Safety and Health (NIOSH) states that carbon dioxide concentrations exceeding 4% are immediately dangerous to life and health.


In indoor spaces occupied by people: concentrations higher than 1'000 ppm will cause discomfort in more than 20% of occupants. At 2'000 ppm, the majority of occupants will feel a significant degree of discomfort and many will develop nausea and headaches.

### Case study: The lake Nyos

The lake Nyos is a crater lake situated in Cameroon. In 1986, a pocket of magma from under the lake, leaked a large amount of CO<sub>2</sub> into the air. The result was suffocation of around 1'700 people and 3'500 livestock!

### Main symptoms of Carbon dioxide toxicity

Volume % in air
Green - 1%
Blue - 3%
Purple - 5%
Red - 8%

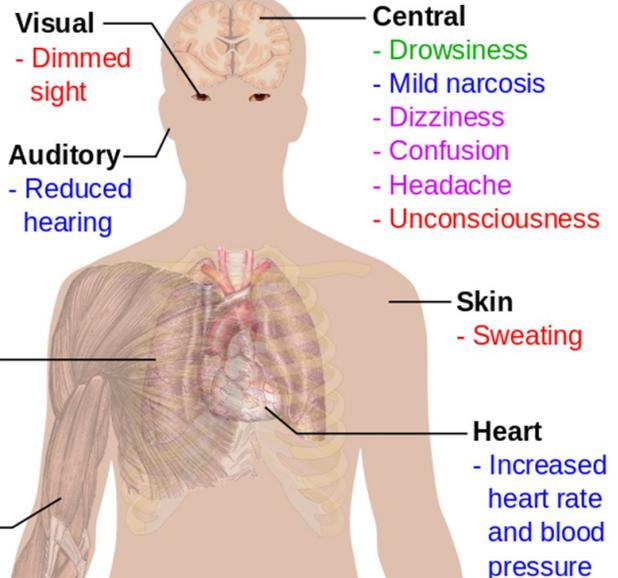

## What solutions can Rotronic offer?

### Non-dispersive infrared technology:

Non dispersive infrared technology relies on the fact that the molecules absorb light (electro-magnetic energy) at spectral regions where the radiated wavelength coincides with internal molecular energy levels. In accordance to well know quantum me-

chanical theory in physical chemistry, such energy resonances exist in the mid-infrared spectral region due to interatomic vibrations.

Since different molecules are formed by different atoms (with different masses) the vibrational resonance frequencies (and wavelengths) are different for every spe-

cies. This fact is the basis for gas sensing though spectral analysis. By detecting the amount of absorbing light, within just a small spectral region that coincides with the resonance wavelength of the selected species, one gets a measure of the number of molecules of this particular species, free from interference of other species.



CF3-W-US-Disp

## Rotronic products

### Transmitters:

- **CF3 series**

0...2'000 ppm,  
± 30 ppm  
24 VDC/VAC power supply,  
2 analogue outputs,  
Output 1: 0...10 VDC,  
Output 2: 4...20mA,  
Temperature range: 0...50°C,  
Optional display,  
Various mounting possibilities,  
Audible alarm,  
Light signal...

- **CF5 series**

0...2'000 ppm,  
± 30 ppm  
0...50°C  
± 2°C  
24 VDC/VAC power supply,  
2 analogue outputs,  
0...10 VDC or 4...20mA,  
Optional display...

- **CF8 series**

0...40'000 ppm,  
± 200 ppm  
With or without temperature measurement,  
24 VDC/VAC power supply,  
2 analogue outputs,  
0...10 VDC or 4...20mA,  
Different relay options  
Temperature range: 0...50°C,  
Display,  
Various mounting possibilities...



CF3-W-US-Disp-FLI

## Customer benefits

A CO<sub>2</sub> sensor controls the ventilation rate in occupied spaces. In the brewery, the principal source of carbon dioxide will be the fermentation process. Outdoor levels tend to be at a relatively low level and are fairly constant. An indoor CO<sub>2</sub> measurement can be compared to outside conditions to provide an indication of the amount of outside air ventilation, on a CFM-per-person basis, that is being provided to an occupied building space.

### Energy saving:

Ventilation will be based on the actual occupancy of the space rather than the forecasted occupancy of the space. The CO<sub>2</sub> sensor here will reduce the ventilation when no beer is being produced but at the same time, during unoccupied hours whereas an air quality sensor may actually maintain ventilation all day round if there is a significant pollutant level in the building.

### Calibration:

The Rotronic CO<sub>2</sub> product range comes calibrated/adjusted!

The lifespan of the product is more than 15 years for normal applications.


The automatic baseline correction means the sensors require no further calibration if they are used in indoor air applications.



CF8-W-Disp-AL

## Contact us:

Rotronic is represented in more than 40 countries around the world. An up to date list of all our partners is available at [www.rotronic-humidity.com/international](http://www.rotronic-humidity.com/international)

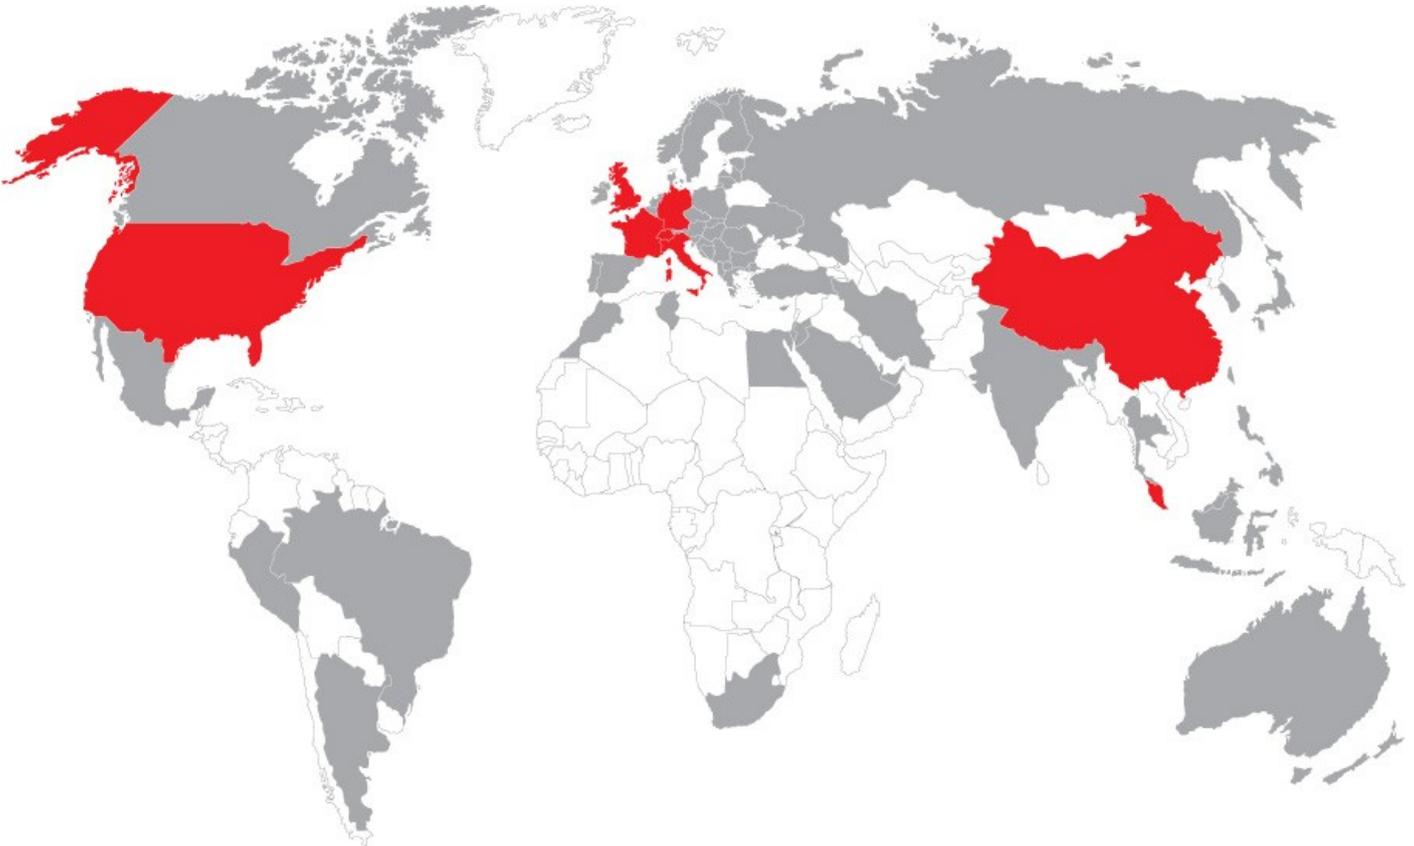

### SWITZERLAND

#### ROTRONIC AG

Grindelstrasse 6,  
CH-8303 Bassersdorf  
Phone: +41 44 838 11 44  
Fax: +41 44 837 00 73  
[www.rotronic-humidity.com](http://www.rotronic-humidity.com)

### FRANCE

#### ROTRONIC Sarl

56, Bld. De Courcerin,  
F-77183 Croissy-Beaubourg.  
Phone: +33 1 60 95 07 10  
Fax: +33 1 60 17 12 56  
[www.rotronic.fr](http://www.rotronic.fr)

### SINGAPORE

#### ROTRONIC South East Asia Pte Ltd

16 Kallang Place #07-04  
Singapore 339156  
Phone: +65 6294 6065  
Fax: +65 6294 6096  
[www.rotronic.com.sg](http://www.rotronic.com.sg)

### GERMANY

#### ROTRONIC Messgeräte GmbH

Einsteinstrasse 17-23  
DE-76275 Ettlingen  
Phone: +49 7243 383 250  
Fax: +49 7243 383 260  
[www.rotronic.de](http://www.rotronic.de)

### UK

#### ROTRONIC Instruments UK Ltd.

Crompton Fields, Crompton Way  
Crawley, West Sussex, RH10 9EE  
Phone: +44 1293 57 10 00  
Fax: +44 1293 57 10 08  
[www.rotronic.co.uk](http://www.rotronic.co.uk)

### ITALY

#### ROTRONIC Italia srl

Via Repubblica di San Marino, 1  
I-20157 Milano (MI)  
Phone: +39 02 39 00 71 90  
Fax: +39 02 33 27 62 99  
[www.rotronic.it](http://www.rotronic.it)

### USA

#### ROTRONIC Instrument Corp.

Suite 150, 135 Engineers Road, Haupt-  
pauge, NY 11788  
Phone: +1 631 427 38 98  
Fax: +1 631 427 39 02  
[www.rotronic-usa.com](http://www.rotronic-usa.com)

### CHINA

#### ROTRONIC Shanghai Rep. Office

2B, Zao Fong Universe Building, No. 1800  
Zhing  
Shan West Road, Shanghai 200233  
China  
Phone: +86 21 644 03 55  
Fax: +86 21 644 03 77  
[www.rotronic-humidity.cn](http://www.rotronic-humidity.cn)